

CONNECTING DIAGRAM

(CN1)

半田面 Solder Side			部品面 Parts Side
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
N/C	E	5	N/C
+12V	F	6	+12V
	H	7	
Coin Counter 2	J	8	Coin Counter 1
N/C	K	9	N/C
Speaker (-)	L	10	Speaker (+)
N/C	M	11	N/C
Video Green	N	12	Video Red
Video Sync	P	13	Video Blue
Service	R	14	Video GND
N/C	S	15	N/C
Coin 2	T	16	Coin 1
※ 2P Start	U	17	1P Start
2P Up	V	18	1P Up
2P Down	W	19	1P Down
2P Left	X	20	1P Left
2P Right	Y	21	1P Right
2P Push S/W 1	Z	22	1P Push S/W 1
2P Push S/W 2	a	23	1P Push S/W 2
N/C	b	24	※ Start 2P vs CPU 協力プレー
N/C	c	25	N/C
N/C	d	26	N/C
GND	e	27	GND
GND	f	28	GND

※Use only when doing 2P conversion.

(CN2)

3P Right	1
3P Left	2
3P Up	3
3P Down	4
3P Push S/W 1	5
3P Push S/W 2	6
N/C	7
3P Start	8
GND	9

(CN3)

4P Right	1
4P Left	2
4P Up	3
4P Down	4
4P Push S/W 1	5
4P Push S/W 2	6
N/C	7
4P Start	8
GND	9

2P用筐体の場合：2P Startは、対戦プレースタート
CN1. 24 は、協力プレースタート

DIP SWITCH SETTINGS

(WWF WRESTLEFEST)

DIP SWITCH 1

1	2	3	4	5	6	7	8	ITEM
								●Coin-1 and 2
OFF	OFF						※	1 Coin 1 Play
ON	OFF							1 Coin 2 Play
OFF	ON							2 Coin 1 Play
ON	ON							3 Coin 1 Play
								●Continue Price
				ON			※	無し(ゲームスタートと同じ) Without Continue Price <Note 1>
				OFF				有り(1コイン) With Continue Price <Note 2>
								●Sound for Demonstration
					OFF		※	可 Sound
					ON			不可 No Sound
								●画面反転 Screen Invert
						OFF	※	通常 Normal
						ON		反転 Invert
								●F.B.I. Logo 表示
						OFF	※	有り Yes
						ON		無し No
								●Regain Power Price
			ON					無し(ゲームスタートと同じ) No <Note 3>
			OFF				※	有り(1コイン) Yes <Note 4>
								●Buy-in Price
		ON						無し(ゲームスタートと同じ) Without Buy-in Price <Note 5>
		OFF					※	有り(1コイン) With Buy-in Price <Note 6>

※Recommended Factory Setting. (標準設定)

<Note 1> The continue price for the game is the game as the starting price for the game.

<Note 2> The continue price is always one coin.

<Note 3> The regain power price for the game is the same as the starting price for the game.

<Note 4> The regain power price is always one coin.

<Note 5> The Buy-in price for the game is the same as the starting price for the game.

<Note 6> The Buy-in price is always one coin.

DIP SWITCH 2

1	2	3	4	5	6	7	8	ITEM
								●難度 Degree of Difficulty
OFF	OFF						※	普通 Normal
ON	OFF							やさしい Easy
OFF	ON							ややむずかしい Difficult
ON	ON							むずかしい Most Difficult
								●セッティング切り替え Setting Select
		OFF	OFF				※	4人用 4 Play Setting
		ON	OFF					3人用 3 Play Setting
		OFF	ON					2人用 2 Play Setting
								●クリア時体力回復 Clear Stage Power Up <Note 7>
					OFF	OFF	※	24
					ON	OFF		32
					OFF	ON		12
					ON	ON		0
								●チャンピオンシップ戦は何試合目 Championship Game
						OFF	※	5試合目 5th
						ON		4試合目 4th
				OFF				●Not used

※Recommended Factory Setting. (標準設定)

<Note 7> Gives Players additional points when stage is cleared.